



1. Connect Audikast(TC418) to PC via micro data/charging cable(included) => switch button to ON => press and hold **BOTH** Button A and Button B for 15s,  close to Both Button A and Button B is on **PINK**, now Audikast enter DFU mode.

2. Upgrade Audikast


1) Find " CSR BlueSuite 2.5.8" from its installation path on your computer, select "DFUWizard" and click.

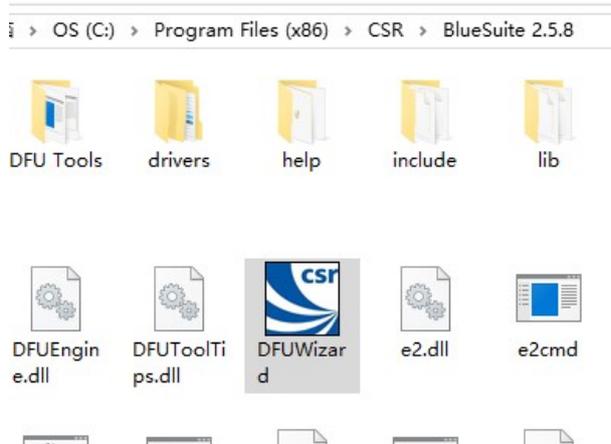

2) Click Next.

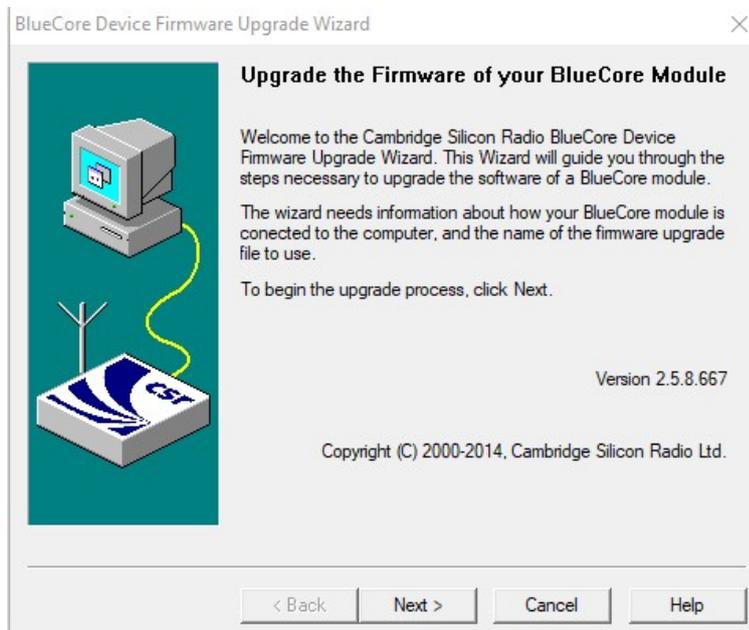


3) Select the first one as below and click Next.

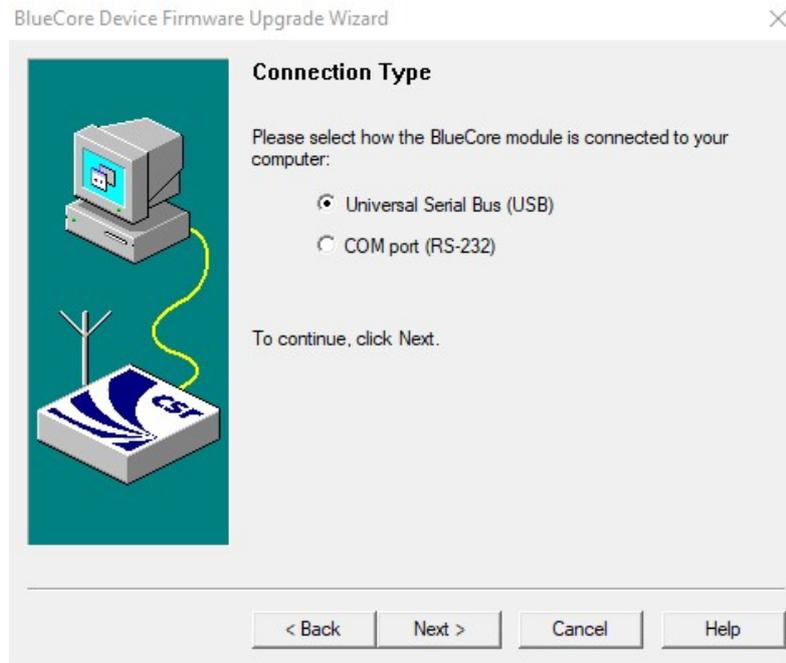


4) Select the **second** one as below and click Next directly.


NOTE: If your computer is default as first one and can't switch to other options, then please **don't** click "change" to back up as it may cause **firmware corrupt**.

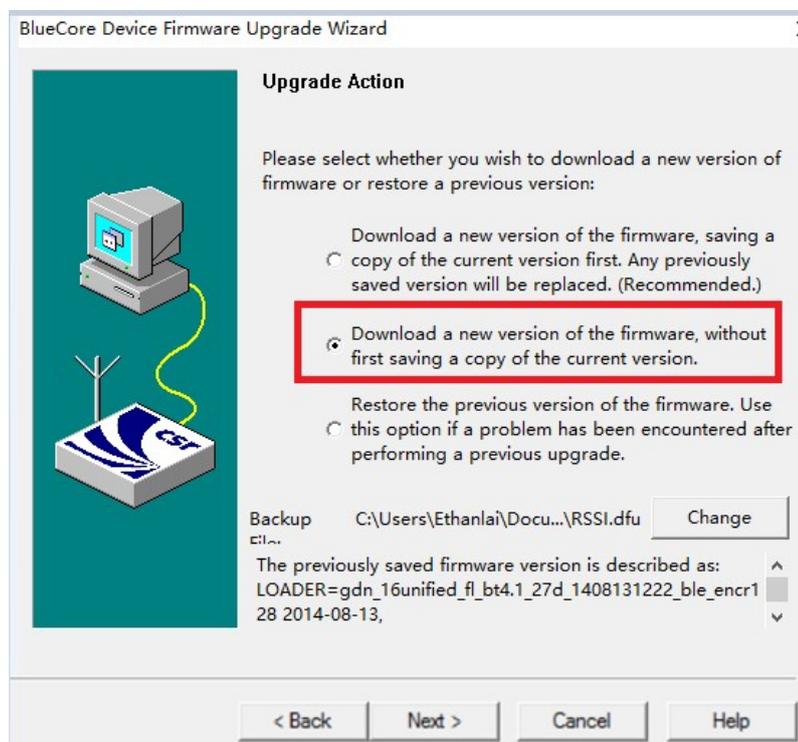


5) Click "Browse" , select "Audikast(TC418) – class 2, then click "Next" .

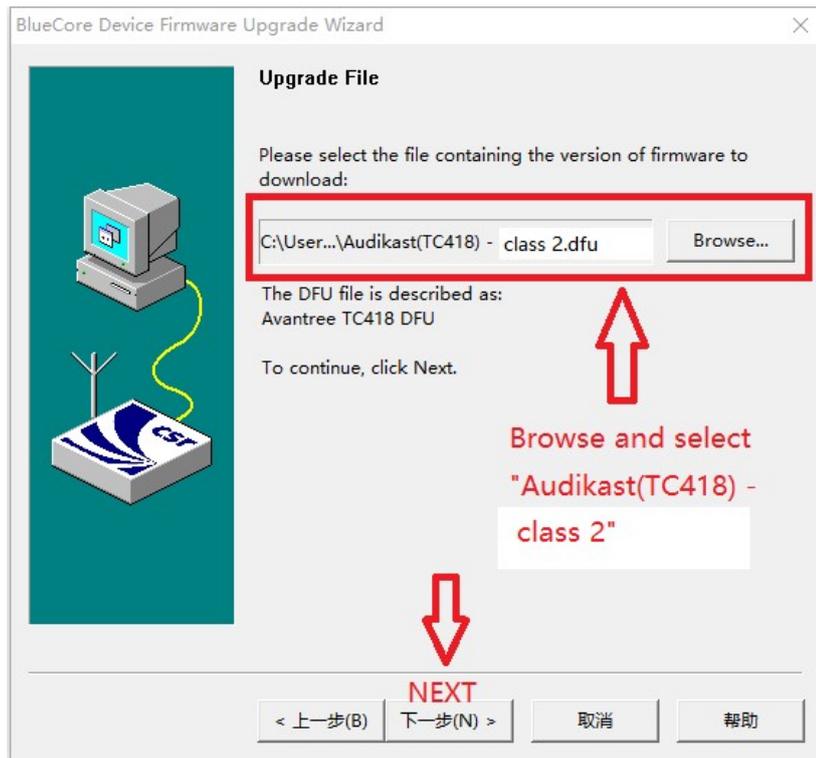


6) Click "Next"

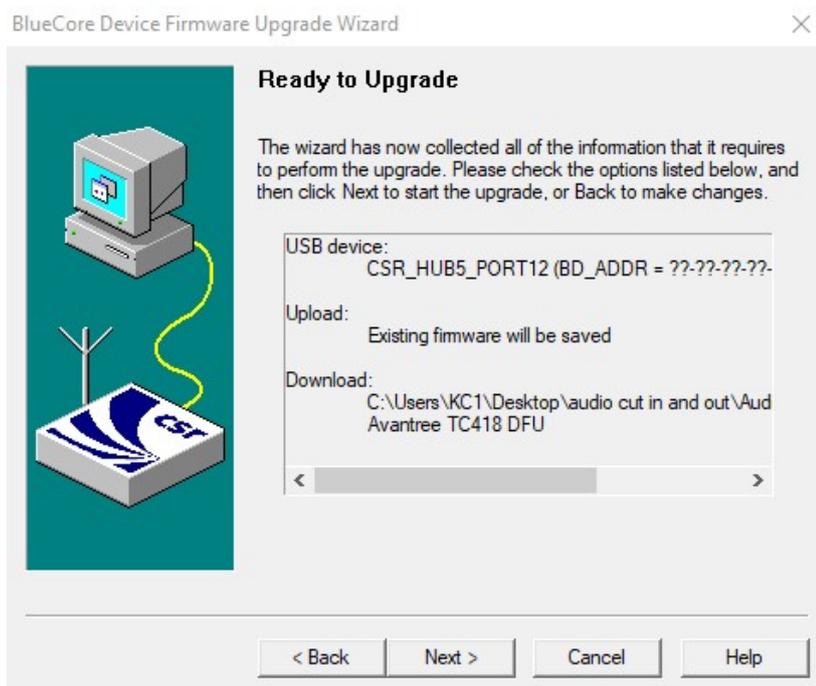

7) Waiting for upgrading

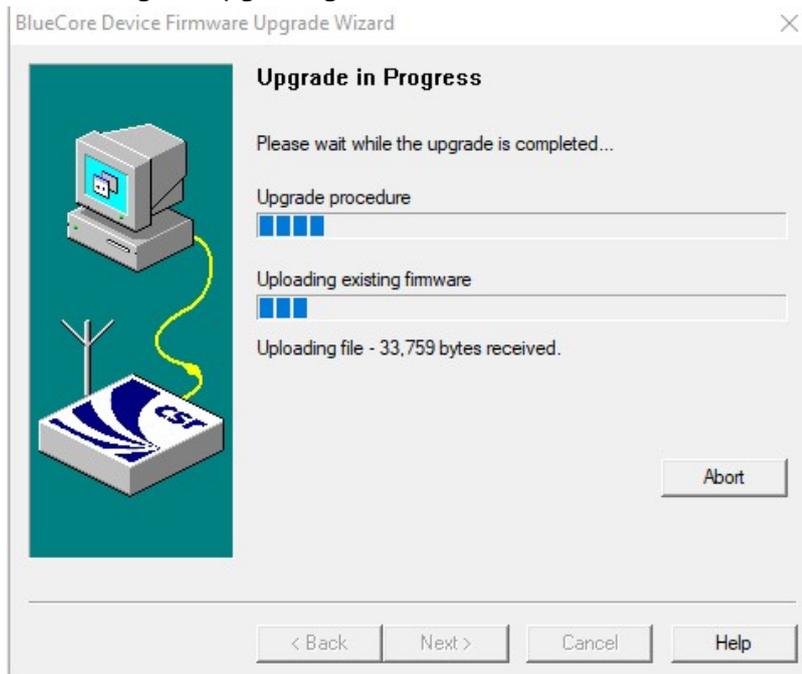

8) After successful upgrade, click "Finish" as below.

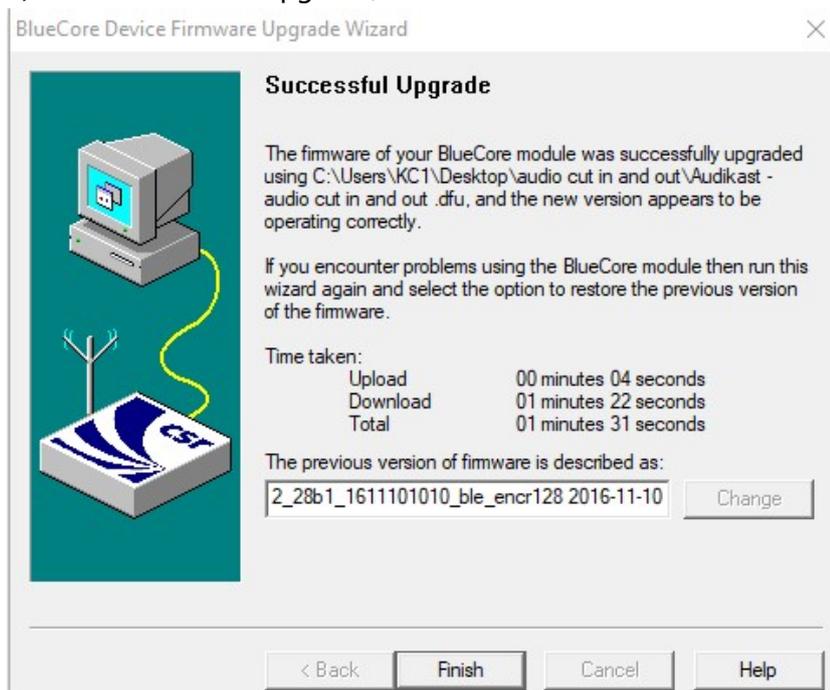

At the same time, Audikast(TC418) enter re-connection mode automatically,  close to Button A flashes **BLUE** once per 2s.