


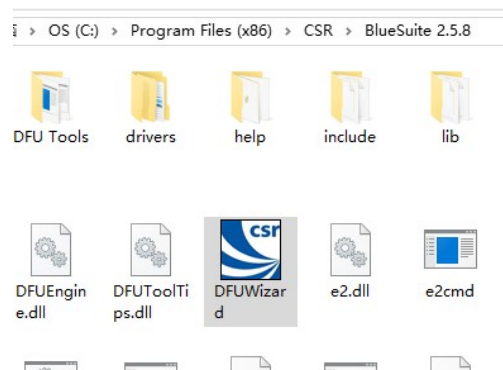
1. Install the CSR BlueSuite 2.5.8 software on your PC(remember its installation path).




2. Restart your PC after it is successfully installed.
3. Connect Audikast(TC418) to PC via micro data/charging cable(included) => switch button to ON => press and hold **BOTH** Button A and Button B for 15s,  close to Both Button A and Button B is on **PINK**, now Audikast(TC418) enter DFU mode.

4. Upgrade Audikast.


- 1) Find " CSRBlueSuite 2.5.8" from its installation path on your computer, select "DFUWizard" and click.




- 2) Click Next.

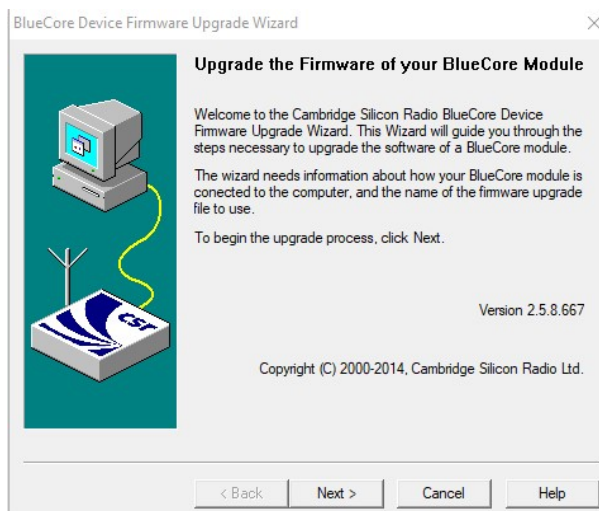


- 3) Select the first one as below and click Next.

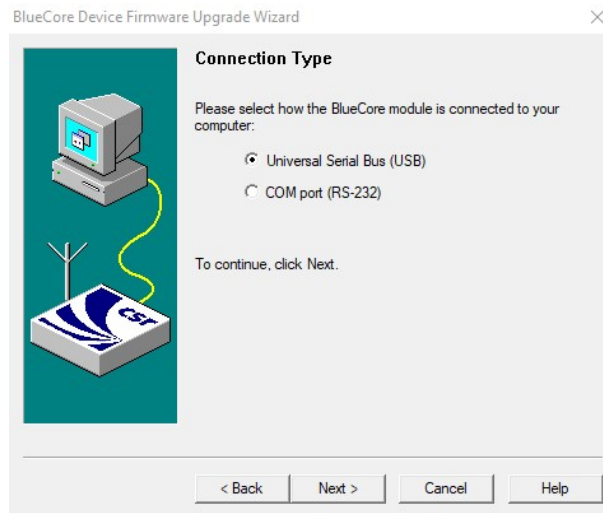


- 4) Select the first one as below and click Next.

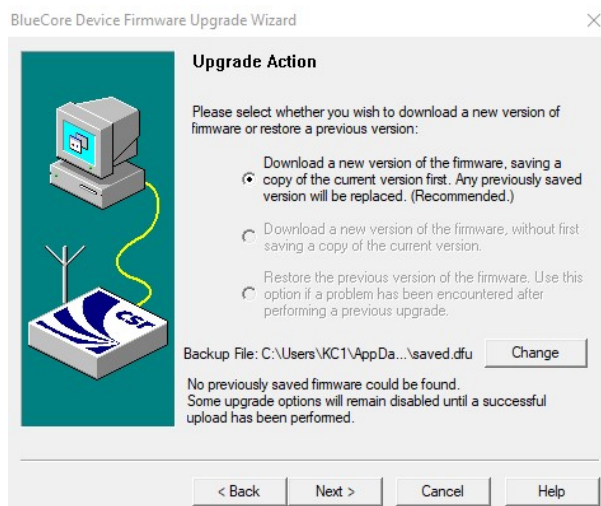


- 5) Click "Browse" , select "Audikast – audio cut in and out" , then click "Next" .

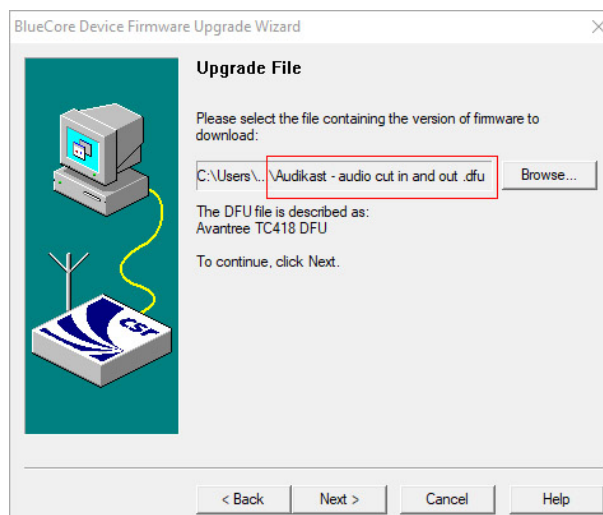


6) Click "Next"

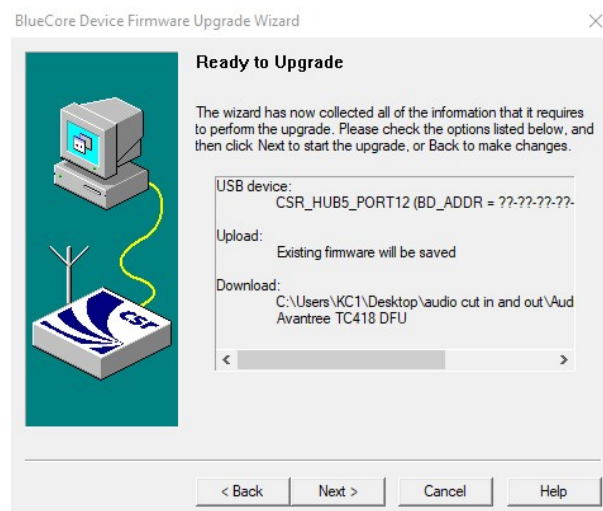


7) Waiting for upgrading

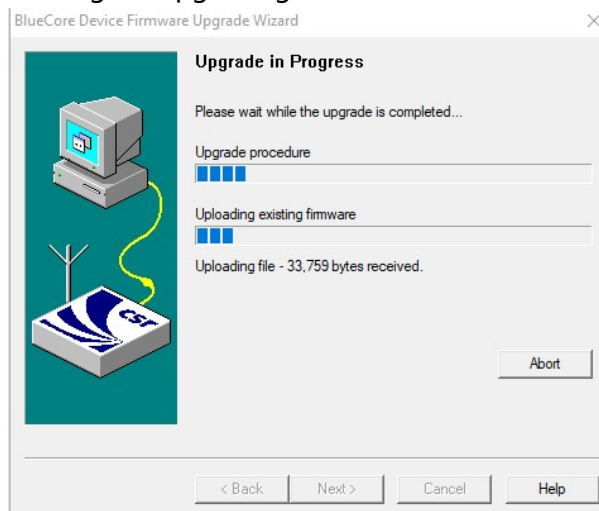

8) After successful upgrade, click "Finish" as below.

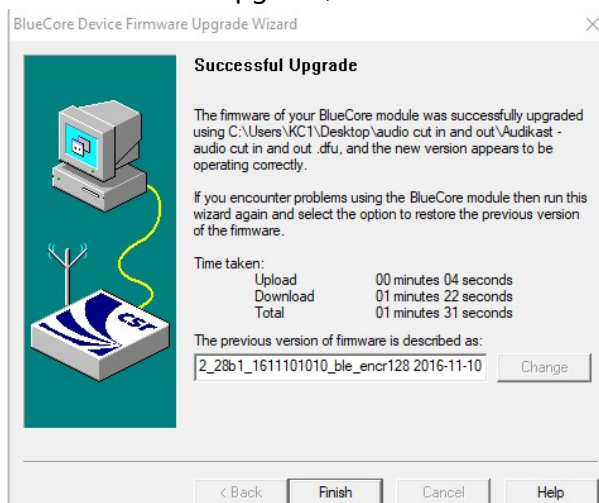

At the same time, Audikast(TC418) enter re-connection mode automatically,  close to Button A flashes **BLUE** once per 2s.