


1, Install the CSR BlueSuite 2.5.8 software on your PC(remember its installation path).




2, Restart your PC after it is successfully installed.


3, Connect Priva III to PC via micro data/charging cable(included) => switch button to ON => press and hold MFB for 15s, BLUE LED is on, now Priva III enter DFU mode.

4, Upgrade Priva III to software V1.


4.1 Find“ CSRBlueSuite 2.5.8” from its installation path on your computer, select “DFUWizard” and click.

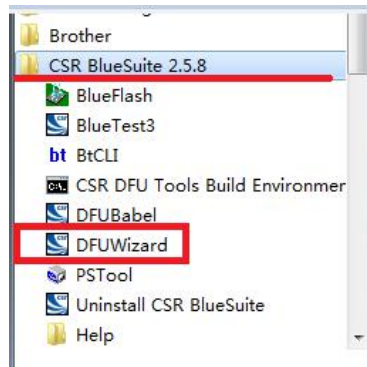


Click Next.

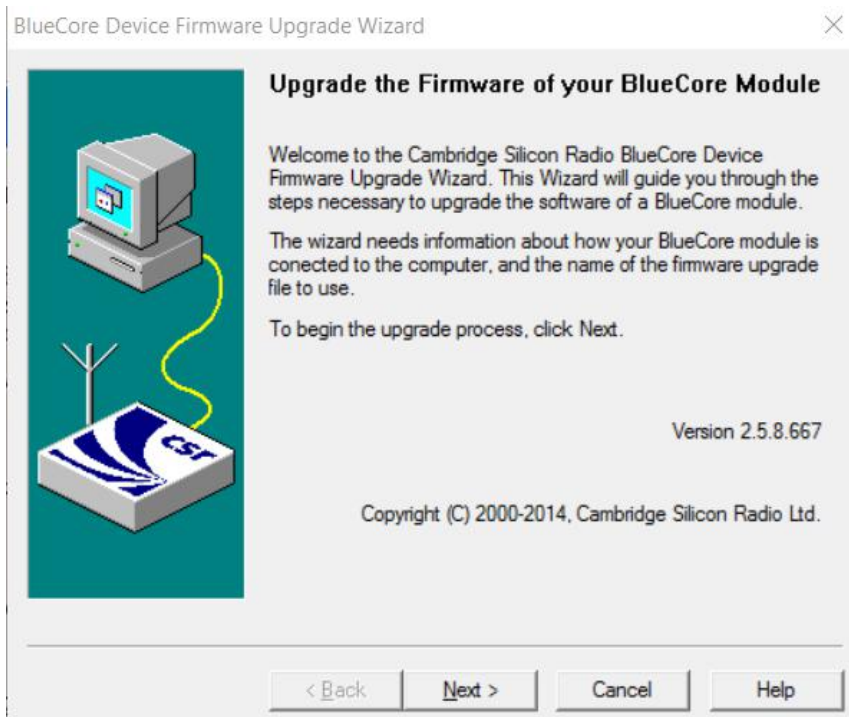


Select the first one as below and click Next.

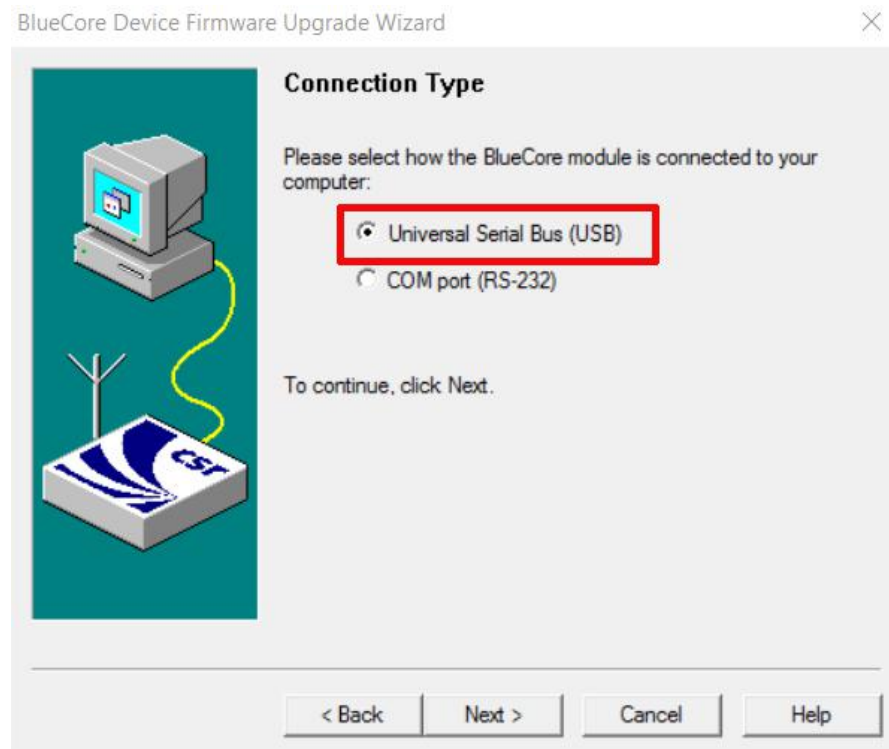


Select the second one as below and click Next.

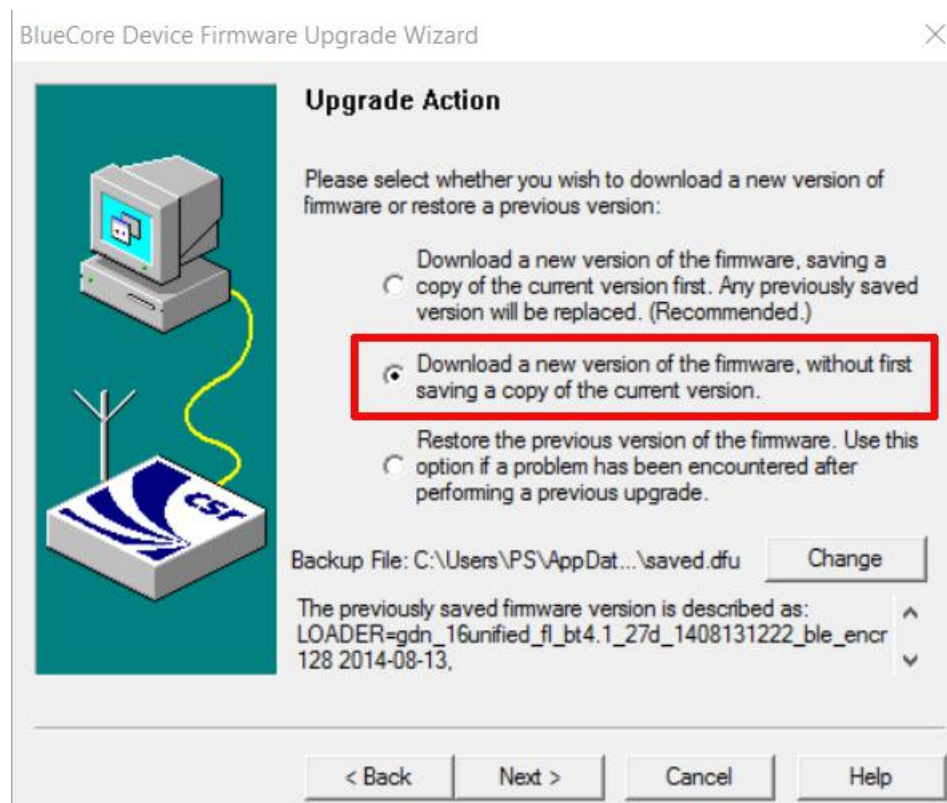


Click "Browse" , select "connect 2 speakers", then click "Next".

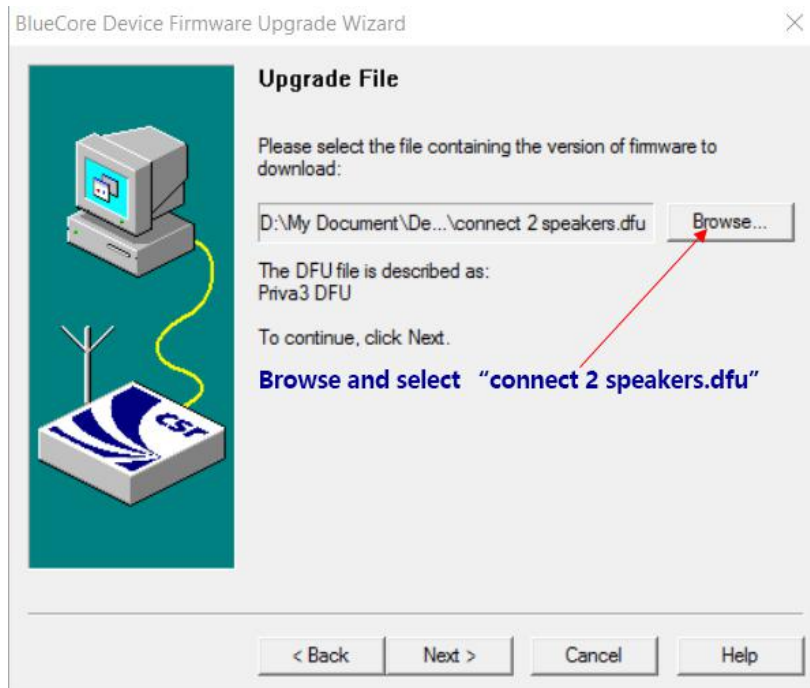

Click "Next"

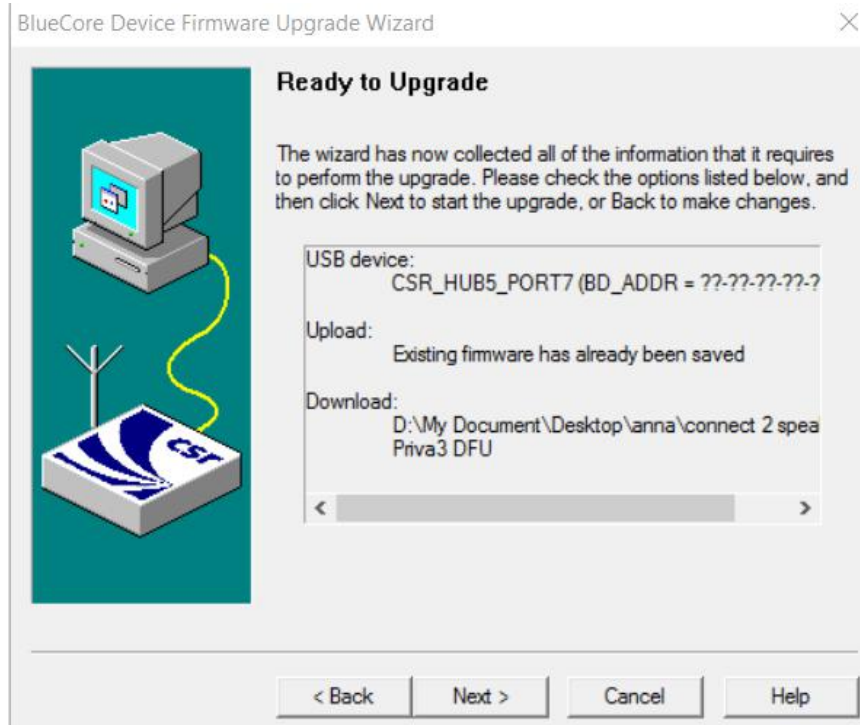

## Waiting for upgrading

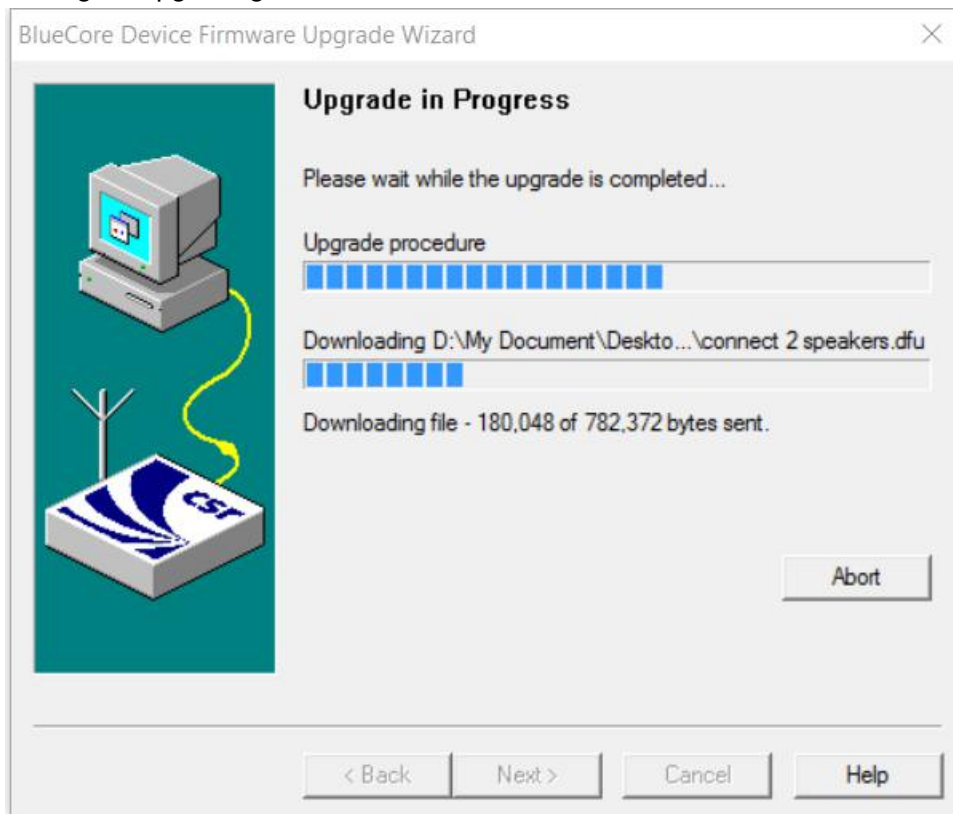

After successful upgrade, click "Finish" as below.

At the same time, Priva III enter re-connection mode automatically, LED flashes BLUE once per 2s.

